



SPARE PARTS

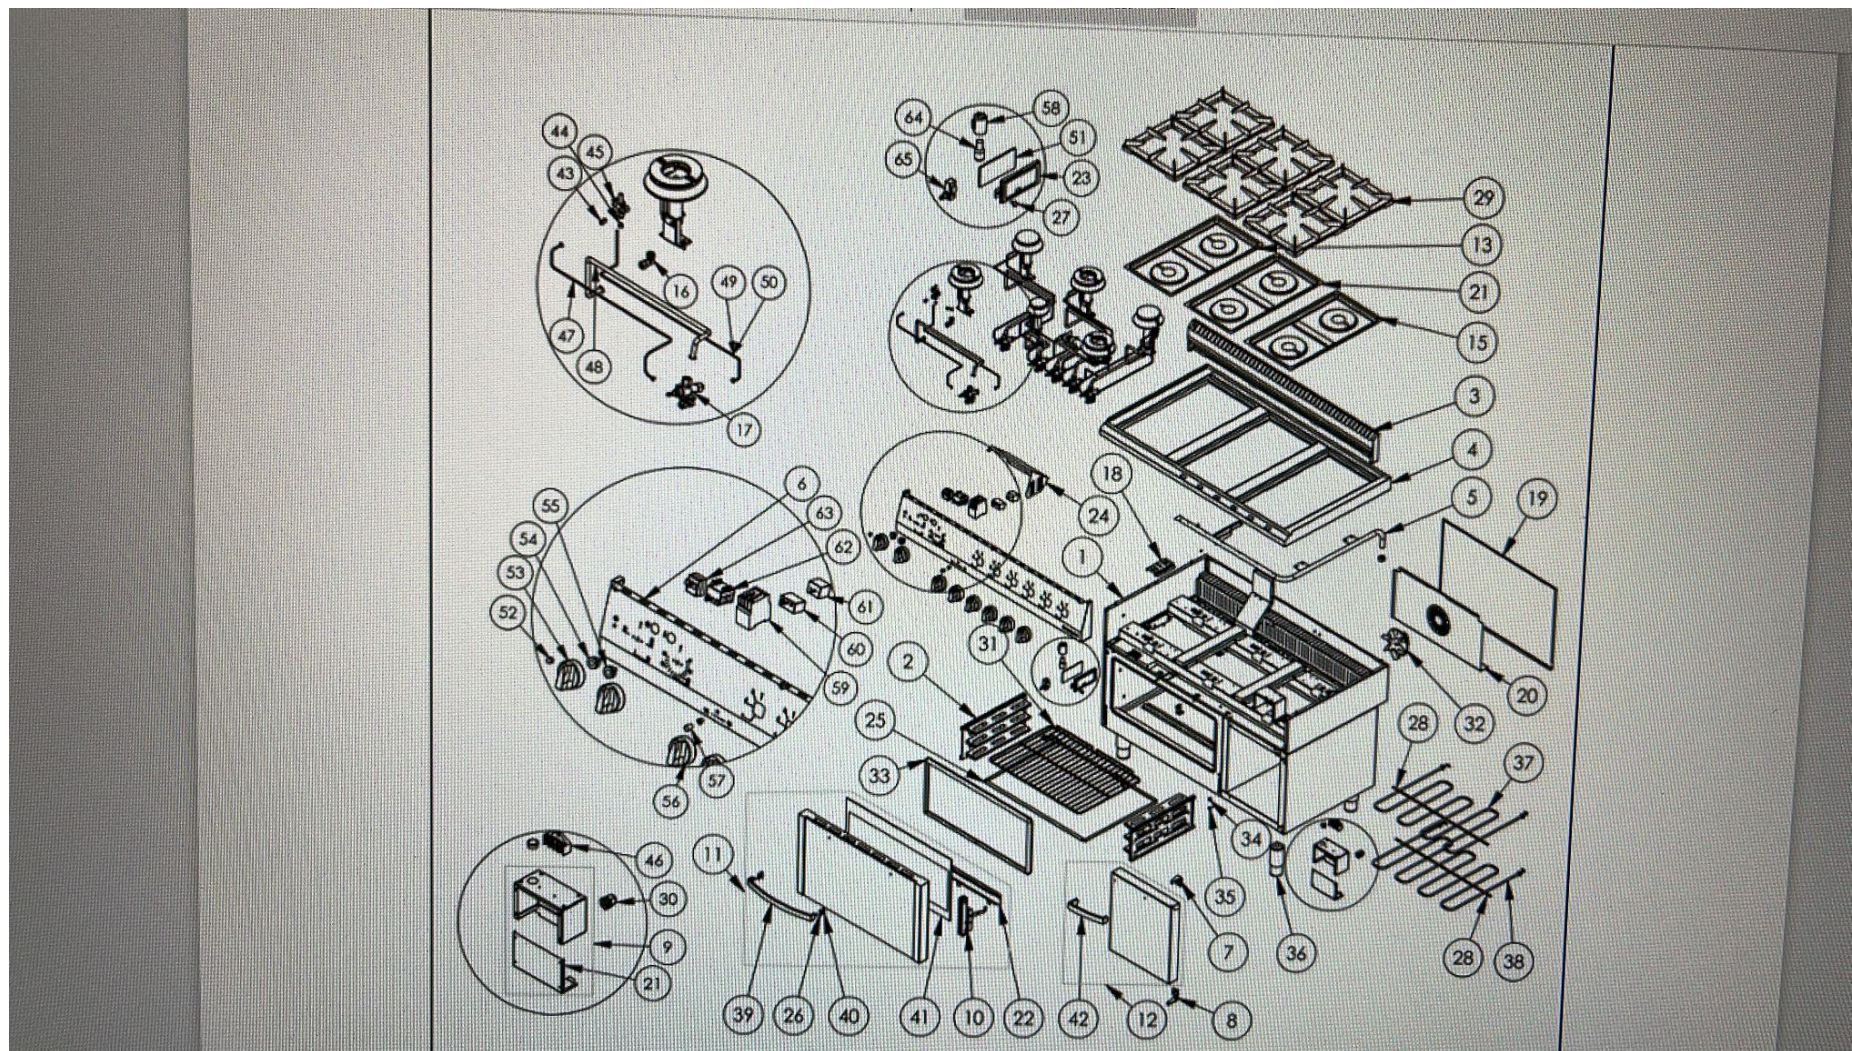

SPARE PARTS

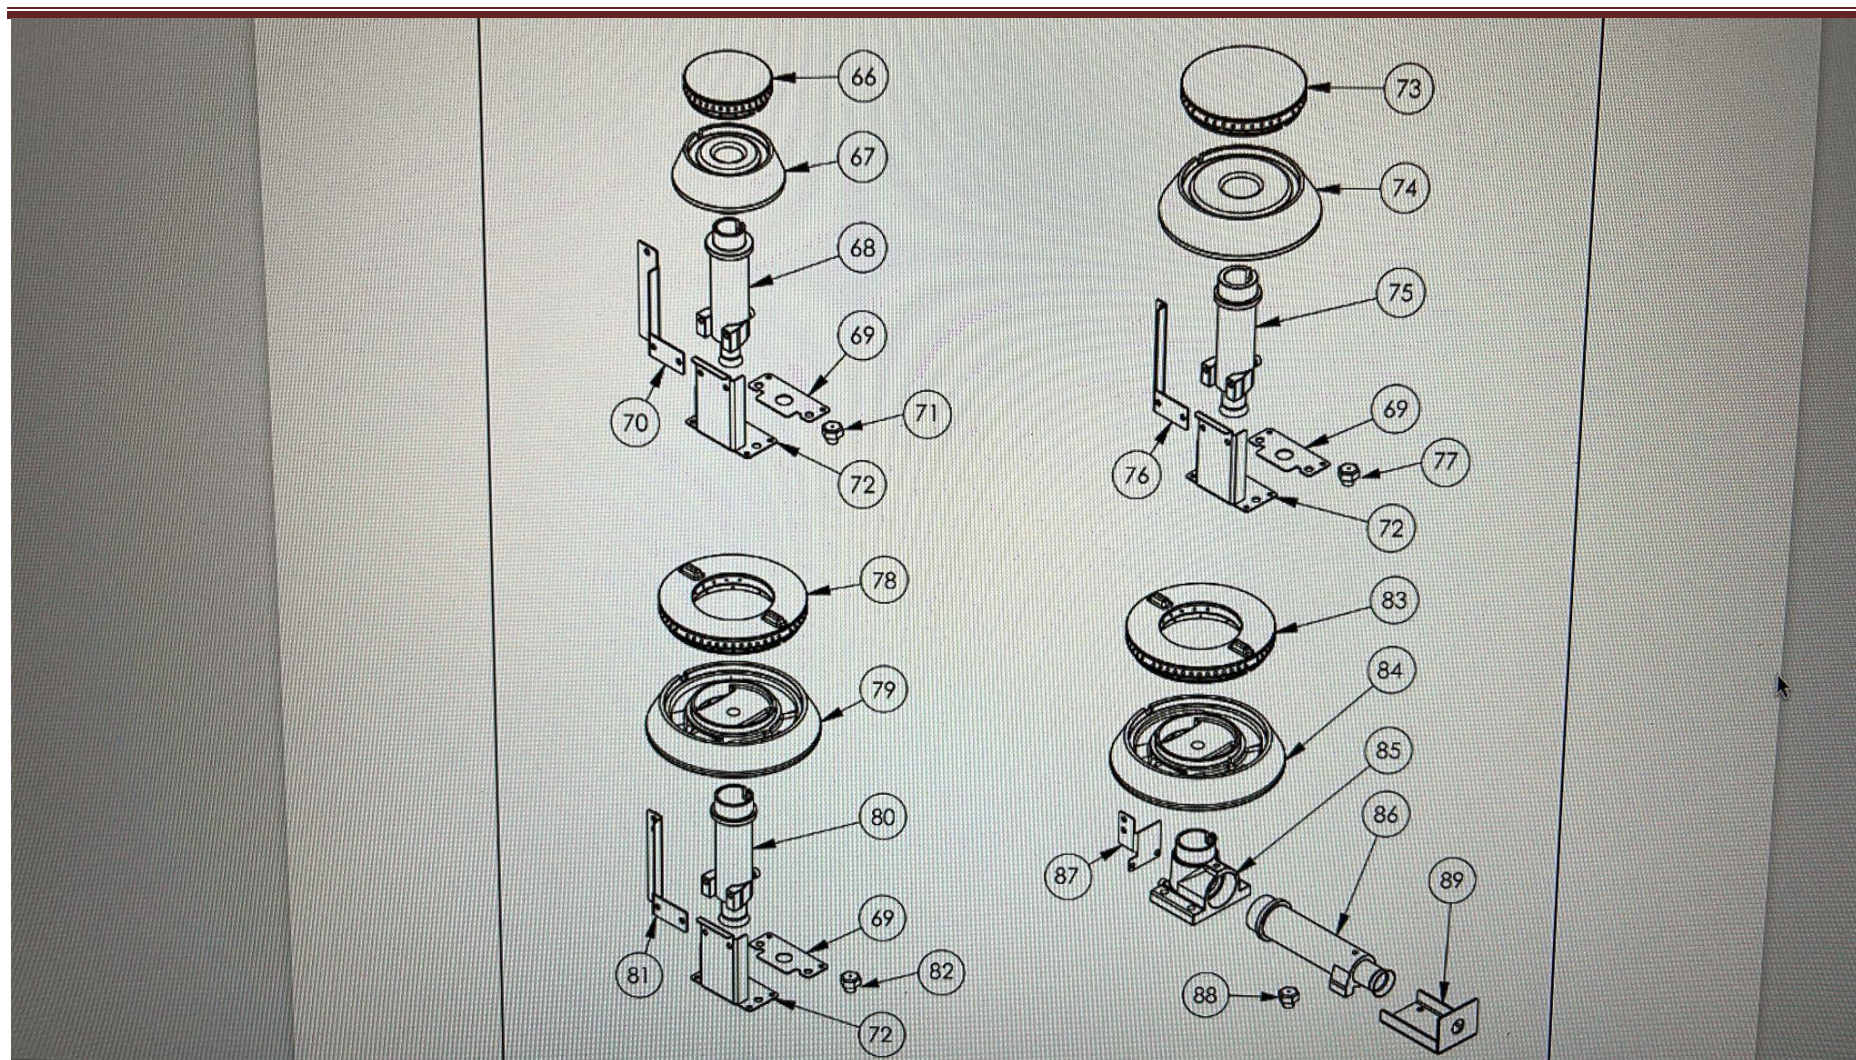

SPARE PARTS

(V drawing. no.- part no. from drawing)	
V9715110-01	Body
V9715110-02	Grate guide rail
V9715110-03	Vent
V9715110-04	Countertop
V9715110-05	Gas collector
V9715110-06	Panel
V9715110-07	Does not apply to this product model
V9715110-08	Does not apply to this product model
V9715110-09	Connection box
V9715110-10	Oven hinge
V9715110-11	Glass door
V9715110-12	Does not apply to this product model
V9715110-13	left cooker
V9715110-14	Does not apply to this product model
V9715110-15	right cooker
V9715110-16	Nozzle base
V9715110-17	Valve
V9715110-18	Lighting cover
V9715110-19	Rear wall of the cabinet
V9715110-20	Fan cover
V9715110-21	Cover
V9715110-22	Attachment of the glass
V9715110-23	Glass frame
V9715110-24	Control cover
V9715110-25	Oven plate
V9715110-26	Washer
V9715110-27	Knurled screw
V9715110-28	Heater support
V9715110-29	Grate
V9715110-30	Cable gland
V9715110-31	Oven grate
V9715110-32	Motor fan
V9715110-33	Oven door gasket
V9715110-34	Magnet
V9715110-35	Does not apply to this product model
V9715110-36	Round foot
V9715110-37	Top heater
V9715110-38	Bottom heater
V9715110-39	Door handle

SPARE PARTS

V9715110-20	Fan cover
V9715110-21	Cover
V9715110-22	Attachment of the glass
V9715110-23	Glass frame
V9715110-24	Control cover
V9715110-25	Oven plate
V9715110-26	Washer
V9715110-27	Knurled screw
V9715110-28	Heater support
V9715110-29	Grate
V9715110-30	Cable gland
V9715110-31	Oven grate
V9715110-32	Motor fan
V9715110-33	Oven door gasket
V9715110-34	Magnet
V9715110-35	Does not apply to this product model
V9715110-36	Round foot
V9715110-37	Top heater
V9715110-38	Bottom heater
V9715110-39	Door handle
V9715110-40	Washer
V9715110-41	Internal glass
V9715110-42	Does not apply to this product model
V9715110-43	Nut with ring
V9715110-44	Pilot burner nozzle
V9715110-45	Pilot burner
V9715110-46	Connecting block
V9715110-47	Copper pipe fi 6
V9715110-48	Copper pipe fi 10
V9715110-49	Thermocouple 600
V9715110-50	Thermocouple 800
V9715110-51	Heat-resistant lighting glass
V9715110-52	Cap nut M8x1
V9715110-53	Electric knob
V9715110-54	Green light
V9715110-55	Orange light
V9715110-56	Gas knob
V9715110-57	Handle M5

SPARE PARTS

Part number (V drawing. no.- part no. from drawing)	Name
V9715110-60	Axial switch
V9715110-61	Thermostat
V9715110-62	Switch
V9715110-63	Safety thermostat
V9715110-64	Light bulb 25W 230V
V9715110-65	Limit switch
V9715110-66	Burner crown 3.5 kW
V9715110-67	Burner body 3.5 kW
V9715110-68	Injektor 3.5 kW
V9715110-69	Strengthening the vertical burner support
V9715110-70	Pilot burner support 3,5 kW
V9715110-71	Burner nozzle 3,5 kW
V9715110-72	Nozzle base support
V9715110-73	Burner crown 5 kW
V9715110-74	Burner body 5 kW
V9715110-75	Injektor 5 kW
V9715110-76	Pilot burner support 5 kW
V9715110-77	Burner nozzle 5 kW
V9715110-78	Burner crown 7 kW
V9715110-79	Burner body 7 kW
V9715110-80	Injektor 7 kW
V9715110-81	Pilot burner support 7 kW
V9715110-82	Burner nozzle 7 kW
V9715110-83	Does not apply to this product model
V9715110-84	Does not apply to this product model
V9715110-85	Does not apply to this product model
V9715110-86	Does not apply to this product model
V9715110-87	Does not apply to this product model
V9715110-88	Does not apply to this product model
V9715110-89	Does not apply to this product model