


## SPARE PARTS



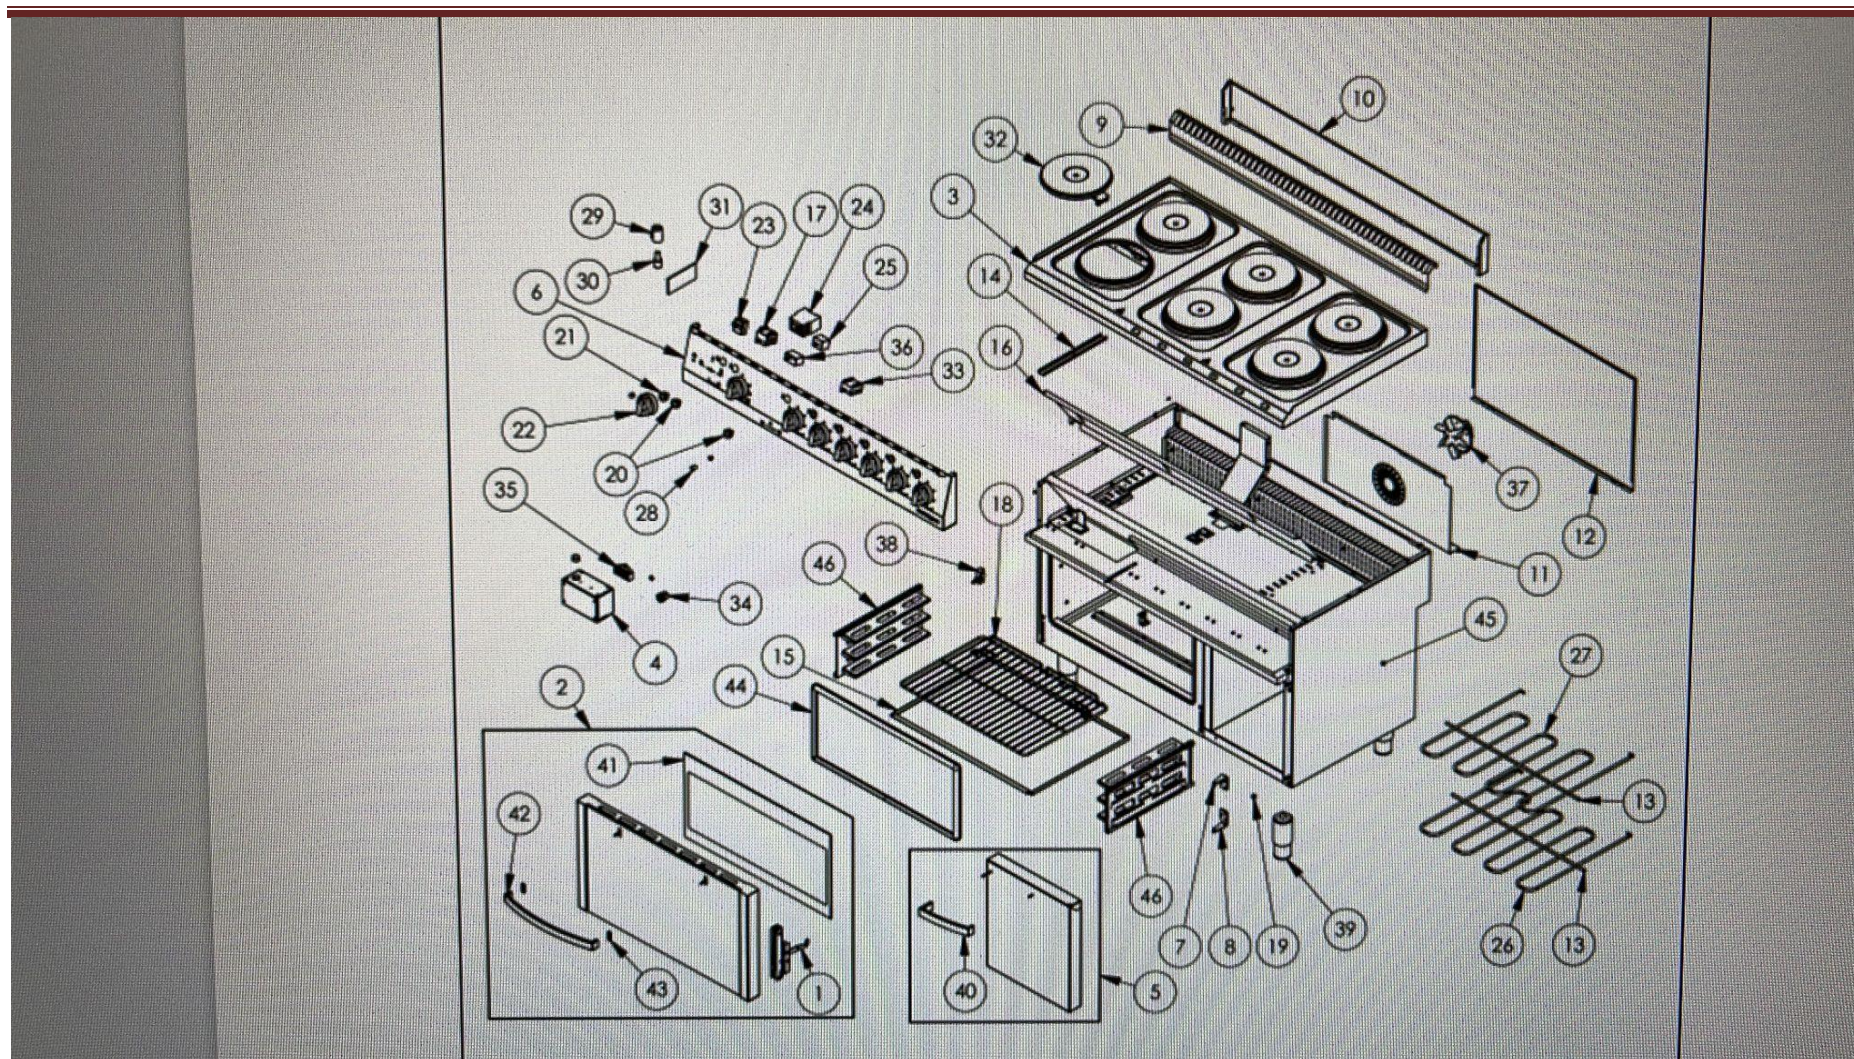

## SPARE PARTS

V9717000-01	Oven hinge
V9717000-02	Glass oven door
V9717000-03	Countertop
V9717000-04	Electrical Box
V9717000-05	Right door 400
V9717000-06	Front panel
V9717000-07	Upper hinge
V9717000-08	Bottom hinge
V9717000-09	Vent cover
V9717000-10	Vent base
V9717000-11	Fan cover
V9717000-12	Back wall
V9717000-13	Heater bracket
V9717000-14	Heating panel handle
V9717000-15	Oven plate
V9717000-16	Switch cover
V9717000-17	Switch
V9717000-18	Oven grate
V9717000-19	Magnet round short
V9717000-20	Orange light
V9717000-21	Green light
V9717000-22	Stalgast Knob
V9717000-23	Safety thermostat
V9717000-24	Contactora
V9717000-25	Thermostat
V9717000-26	Bottom heater 4000W 400V
V9717000-27	Top heater 3000W 400V
V9717000-28	Tapered handle, threaded
V9717000-29	Ceramic holder E14
V9717000-30	Light bulb T25 E14 25W 230V
V9717000-31	Heat-resistant lighting glass
V9717000-32	Heating panel 2600W
V9717000-33	6-step switch
V9717000-34	Cable gland PG13,5
V9717000-35	Connecting block
V9717000-36	Axial switch
V9717000-37	Fan + Motor 35W 220V 50Hz
V9717000-38	Limit switch
V9717000-39	Round foot